

COSMOS

Poly-Carbonate Skylight Kit

Installation

For existing shed

1. Remove from one side back corner.
2. Remove gutter by first removing screws and the gutter itself.
3. Remove one of the middle roof panels, plus their adjoining smart connector (you are now at pict.1).
4. Slide skylight connectors into adjoining roof panels making sure that skylight guide is on top (as shown in pictures 2 & 3).
5. Slide in skylight making sure to follow "this side up - UV Protector" sign on skylight.
6. Return gutter and attach screws.
7. Return corner, remembering to re-silicon closings.
8. Follow same procedure for the other side of the roof.


Instructions

For new shed


1. Follow instruction for roofing installation.
2. Decide which middle roof panel is to be replaced.
3. Slide skylight connectors into adjoining roof panels making sure that skylight guide is on top (as shown in pictures 2 & 3).
5. Slide in skylight making sure to follow "this side up - UV Protector" sign on skylight.
6. Complete roof assembly as instructed in manual.

Use gloves for your own protection!

pict.1

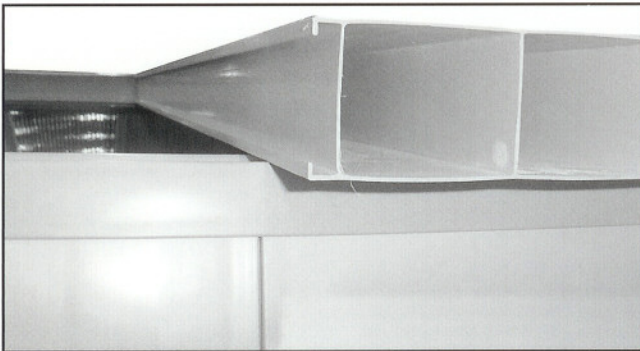

pict.2

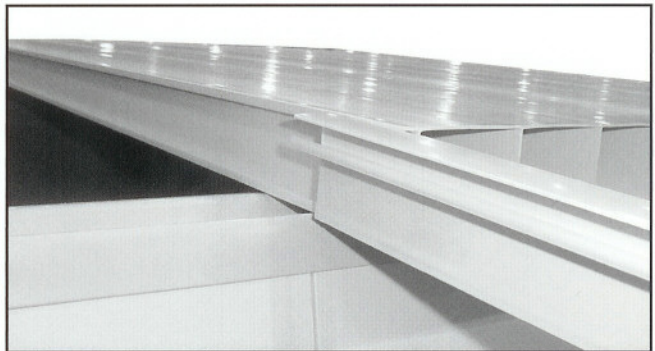

pict.3



pict.4

