


# Install gable sunburst window

1. The window is designed with a flange which will be used to secure to exterior of siding. Using the sunburst window as a template trace on siding the outline of the inner portion of the window. Cut and remove siding. Caulk along the top and sides of the window to allow moisture to drain. Install window to the exterior of the siding with screen toward bottom using short white screws provided. Place screws equally around perimeter.

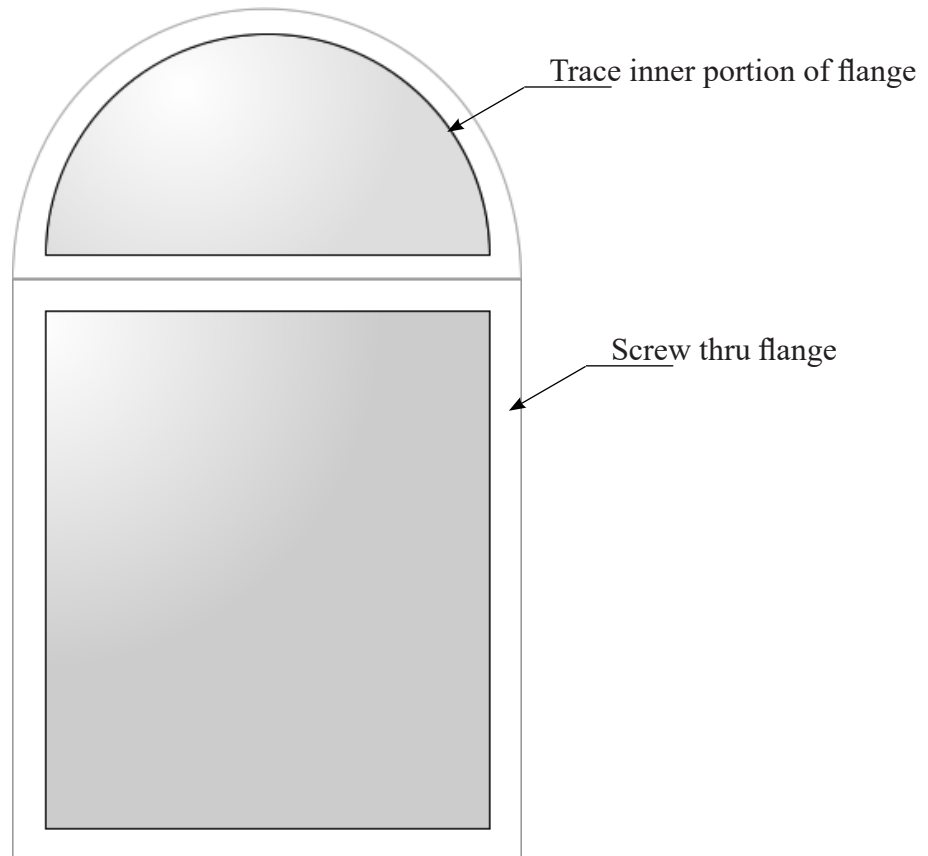

## Replacement Parts List:

White sheet metal screws

## Use and Care Information:

Shed siding must be painted prior to installation.

Using exterior caulking, caulk flange along 3 sides of sunburst window.