


Install 18"x36" window with wood shutters

1. Locate where you want to place the window. Cut a 18-3/8" x 35-3/4" opening in siding between the 24" O.C. wall studs at the height you desire. Caulk along the top and sides of the window on the inside flange that will contact the siding. Leave bottom un-caulked to allow for moisture to drain. Install window to the exterior of the siding with screen toward bottom using short white screws provided. Place screws equally around perimeter.

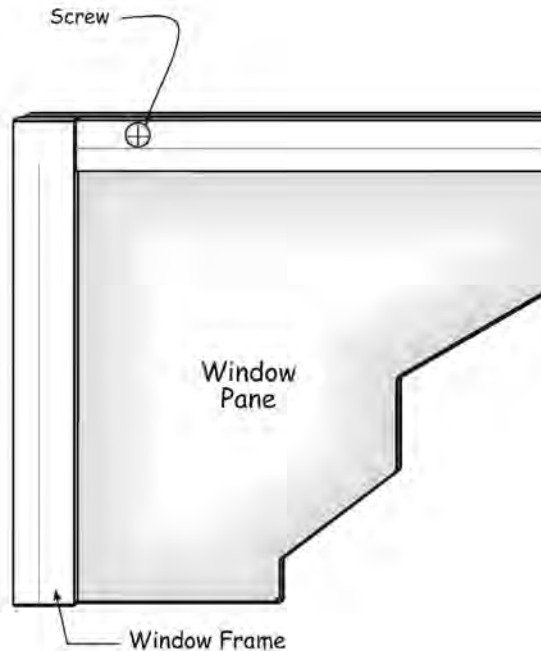

2. Place one shutter, either left or right, covering the flange on either side. Center shutters aside window frame. Secure by screwing 1" drywall screws through siding into the back of the shutter. Tip: Open window and screen to allow you to hold the window while screwing from interior of shed. Repeat for next shutter.

Replacement Parts List:

Wood Shutters (1 pair)
1" Drywall screws
White sheet metal screws

Use and Care Information:

Shed siding must be painted prior to installation.
Shutters must be painted or stained with exterior paint or stain.
Using exterior caulking, caulk flange to siding along 3 sides to prevent water from penetrating interior. Leave bottom un-caulked.